

INTRODUCTION

This service manual has been prepared to provide necessary information concerning the maintenance and repair procedures for the NISSAN FORKLIFT 1F1 and 1F2 series.

Any changes effected in the series after publication of this service manual will be announced in a technical bulletin. It is, therefore, recommended that each relevant technical bulletin be inserted in front of each section and be used together with the service manual as a reference.

If a new model requires different service method or has undergone a major change, revised sections will be issued to replace the applicable sections. Each revised section will include the description of how to service the parts for the former specifications. The publication of a revised section will be announced in the technical bulletin.

This service manual consists of seventeen sections as shown in the following table, which gives the updated symbols. When a revised service manual is issued, this "INTRODUCTION" sheet should be replaced with a revised one.

Section	Symbol
GENERAL INFORMATION	(GI)
MAINTENANCE	(MA)
ENGINE REMOVAL	(ER)
AUTOMATIC TRANSMISSION 1-SPEED	(AT1)
DIFFERENTIAL CARRIER	(DF)
DRIVE AXLE	(DA)
STEERING AXLE	(SA)
ROAD WHEEL & TIRE	(RT)
BRAKE SYSTEM	(BR)
STEERING SYSTEM	(ST)
HYDRAULIC SYSTEM	(HD)
LOADING MECHANISM	(LM)
FUEL & EXHAUST SYSTEMS	(FE)
VEHICLE CONTROL SYSTEMS	(VC)
BODY & FRAME	(BF)
BODY ELECTRICAL SYSTEM	(BE)

Edition: February 2008
Printing: March 2008
Publication: SM08E-1F12EU