

[Click here to get the complete manual](#)

## GROUP INDEX

# FE.FG

## SERVICE MANUAL

### 2005 Model

### FOREWORD

This Service Manual contains maintenance and repair methods for the Mitsubishi Fuso Truck FE. FG Series. Read this manual carefully as an aid in providing correct, efficient maintenance. Please note that the information and specifications contained within this manual may change without notice. This is due to product modifications and continued vehicle improvements that are made throughout the model years. Should you encounter any discrepancy in the information provided, please do not hesitate to contact your nearest Mitsubishi Fuso Dealer or Mitsubishi Fuso Truck of America, Inc.

May 2004

GENERAL .....	00
MAINTENANCE SCHEDULE .....	01
ENGINE.....	11
LUBRICATION .....	12
FUEL AND ENGINE CONTROL.....	13A
ELECTRONICALLY CONTROLLED FUEL SYSTEM .....	13E
COOLING.....	14
INTAKE AND EXHAUST .....	15
EMISSION CONTROL .....	17
CLUTCH.....	21
MANUAL TRANSMISSION .....	22
AUTOMATIC TRANSMISSION.....	23
TRANSFER.....	24
PROPELLER SHAFT .....	25
FRONT AXLE	
<FE> .....	26A
<FG>.....	26B
REAR AXLE.....	27
WHEEL AND TIRE .....	31
FRONT SUSPENSION .....	33
REAR SUSPENSION.....	34
BRAKE.....	35A
ANTI-LOCK BRAKE SYSTEM .....	35E
PARKING BRAKE .....	36
STEERING .....	37
FRAME.....	41
CAB.....	42
DOOR.....	43
EXTERIOR .....	51
INTERIOR .....	52
ELECTRICAL.....	54
AIR-CONDITIONER.....	55A
HEATER.....	55B