

[Click here to get the complete manual](#)

DX140LC

Shop Manual

K1034080E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety

| | |
|------------------------------|----------|
| Track Excavator Safety | SP000014 |
|------------------------------|----------|

Specifications

| | |
|--------------------------------|----------|
| Specification for DX140LC..... | SP001313 |
|--------------------------------|----------|

General Maintenance

| | |
|--------------------------------------|----------|
| General Maintenance Procedures | SP000016 |
| Standard Torques | SP000813 |

Upper Structure

| | |
|---------------------------|----------|
| Cabin | SP000943 |
| Counterweight..... | SP000940 |
| Fuel Tank..... | SP001320 |
| Fuel Transfer Pump..... | SP000021 |
| Swing Bearing..... | SP000022 |
| Swing Reduction Gear..... | SP000921 |

Lower Structure and Chassis

| | |
|----------------------|----------|
| Track Assembly | SP001321 |
|----------------------|----------|

Engine and Drive Train

| | |
|---------------------------------|----------|
| Drive Coupling (Main Pump)..... | SP001326 |
|---------------------------------|----------|

Hydraulics

| | |
|----------------------------------------------------------------|----------|
| Hydraulic System Troubleshooting, Testing and Adjustment | SP001327 |
| Accumulator | SP000028 |
| Center Joint (Swivel)..... | SP000029 |
| Cylinders..... | SP000030 |

| | |
|----------------------------------------------------|----------|
| Swing Motor..... | SP000985 |
| Travel Moter..... | SP001346 |
| Main Pump..... | SP001329 |
| Main Control Valve | SP001029 |
| Remote Control Valve (Work Lever / Joystick) | SP000069 |
| Travel Control Valve (with Damper)..... | SP000070 |
| Solenoid Valve Assembly | SP000445 |
| Breaker EPPR Valve (Opt) | SP000192 |
| Hydraulic Schematic (DX140LC) | SP001330 |

Electrical System

| | |
|--------------------------------------|----------|
| Electrical System | SP001038 |
| Electrical Schematic (DX140LC) | SP001357 |

Attachments

| | |
|-------------------|----------|
| Boom and Arm..... | SP001331 |
| Bucket..... | SP000939 |