

[Click here to get the complete manual](#)

# **DX170W**

Shop Manual

K1042891E

Serial Number 5001 and Up

DOOSAN reserves the right to improve its products continuously, delivering the best possible product to the marketplace. These improvements can be implemented at any time with no obligation to change materials previously sold. It is recommended that consumers periodically contact their distributors for most recent documentation on purchased equipment.

This documentation may include attachments and optional equipment not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

**DX170W**

Serial Number 5001 and Up

Pub.No. K1042891E

**Product Label**



**Instructions**

**Trim Out The Label Along  
The Lines And Insert Into  
Pocket On The Binder Spine**



# Table of Contents

## Safety

Wheel Excavator Safety .....	SP002195
------------------------------	----------

## Specifications

Specification for DX170W .....	SP001864
--------------------------------	----------

## General Maintenance

General Maintenance Procedures .....	SP000016
Standard Torques .....	SP000813

## Upper Structure

Cabin (Non-ROPS) .....	SP002194
Cabin (ROPS) .....	SP002191
Counterweight .....	SP001866
Fuel Tank .....	SP001867
Fuel Transfer Pump .....	SP001868
Swing Bearing .....	SP001869
Swing Reduction Gear .....	SP000921

## Lower Structure and Chassis

Ram Lock Valve .....	SP000923
Selector Valve .....	SP000926
Double Pilot Check Valve .....	SP000927
Solenoid Valve .....	SP000928
Front Axle .....	SP000929
Rear Axle .....	SP000930

## Engine and Drivetrain

Transmission .....	SP000962
--------------------	----------

Drive Coupling (Main Pump).....	SP000963
---------------------------------	----------

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment .....	SP002229
Accumulator.....	SP000984
Center Joint (Swivel).....	SP000919
Cylinders.....	SP001870
Main Control Valve .....	SP001990
Swing Motor.....	SP001871
Travel Motor.....	SP001872
Counterbalance Valve .....	SP000991
Main Pump & PTO.....	SP001873
Gear Pump .....	SP000989
Service Brake Supply Valve .....	SP000990
Dozer Control Valve.....	SP000992
Steering Valve .....	SP000993
Accelerator Pedal Valve (Hydraulic) .....	SP001515
Remote Control Valve (Work Lever / Joystick) .....	SP000189
Breaker EPPR Valve (Opt) .....	SP001874
Service Brake Pedal Valve .....	SP001006
Solenoid Valve Assembly .....	SP000997
Hydraulic Schematic (DX170W) .....	SP001875

## Electrical System

Electrical System (Non-ROPS).....	SP002212
Electrical System (ROPS).....	SP002213
Electrical Schematic DX140W/160W/170W/190W/210W .....	SP002201

## Attachments

Boom and Arm.....	SP001876
Bucket.....	SP001001