

[Click here to get the complete manual](#)

DX235LCR

Shop Manual

950106-00081E

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

DX235LCR

Serial Number 5001 and Up

Pub.No. 950106-00081E



Product Label



Instructions

**Trim Out The Label Along
The Lines And Insert Into
Pocket On The Binder Spine**

Table of Contents

Safety

Track Excavator Safety.....	SP002112
-----------------------------	----------

Specifications

Specification for DX235LCR.....	SP002113
---------------------------------	----------

General Maintenance

General Maintenance Procedures.....	SP000016
Standard Torques.....	SP000813

Upper Structure

Cabin	SP001938
Counterweight.....	SP002114
Fuel Tank.....	SP002115
Fuel Transfer Pump.....	SP000021
Swing Bearing.....	SP000022

Lower Structure and Chassis

Track Assembly	SP002116
----------------------	----------

Engine and Drive Train

Drive Coupling (Main Pump).....	SP002117
---------------------------------	----------

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	SP002118
Accumulator.....	SP000028
Center Joint (Swivel).....	SP001620
Cylinders.....	SP002119

Swing Device	SP002120
Travel Motor.....	SP001621
Main Pump and PTO	SP000988
Gear Pump	SP000931
Main Control Valve	SP001024
Remote Control Valve (Work Lever / Joystick)	SP000069
Travel Control Valve (with Damper).....	SP002130
Solenoid Valve Assembly	SP001944
Breaker EPPR Valve (Opt)	SP000192
Hydraulic Schematic (DX235LCR)	SP002121

Electrical System

Electrical System	SP002122
Electrical Schematic (DX235LCR).....	SP002123

Attachments

Boom and Arm.....	SP002124
Bucket.....	SP000939