

[Click here to get the complete manual](#)

## **DX235NLC**

Shop Manual

950106-00303

Serial Number 50001 and Up

*DOOSAN* reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

**DX235LC**

Serial Number 50001 and Up

Pub.No. 950106-00303



**Product Label**



**Instructions**

**Trim Out The Label Along  
The Lines And Insert Into  
Pocket On The Binder Spine**

# Table of Contents

## Safety

Track Excavator Safety .....	SP000014
------------------------------	----------

## Specifications

Specification for DX235NLC .....	SP002177
----------------------------------	----------

## General Maintenance

General Maintenance Procedures .....	SP000016
Standard Torques .....	SP000813

## Upper Structure

Cabin .....	SP000943
Counterweight.....	SP000940
Fuel Tank.....	SP001014
Fuel Transfer Pump .....	SP000021
Swing Bearing.....	SP001109
Swing Reduction Gear .....	SP000915

## Lower Structure and Chassis

Track Assembly .....	SP000911
----------------------	----------

## Engine and Drive Train

Drive Coupling (Main Pump) .....	SP001069
----------------------------------	----------

## Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment .....	SP002178
Accumulator.....	SP000028
Center Joint (Swivel).....	SP001620

Cylinders.....	SP000030
Swing Motor.....	SP001013
Travel Motor.....	SP001621
Gear Pump.....	SP000931
Main Control Valve.....	SP001024
Axial Piston Pump.....	SP001008
PTO Server .....	SP000933
Remote Control Valve (Work Lever / Joystick) .....	SP001646
Travel Control Valve (with Damper) .....	SP001647
Solenoid Valve Assembly.....	SP001622
Breaker EPPR Valve (Opt).....	SP000192
Hydraulic Schematic (DX225NLC/DX235NLC).....	SP001057

## **Electrical System**

Electrica System .....	SP002182
Electrical Schematic (DX180LC/DX225LC/DX225NLC/DX235NLC) ..	SP000936

## **Attachments**

Boom and Arm .....	SP000937
Bucket.....	SP000939