## Click here to get the complete manual

## DX255LC

Shop Manual
K1016585E
Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

## **Table of Contents**

Safety	
Track Excavator Safety	SP000014
Specifications	
Specification for DX255LC	SP001009
General Maintenance	
General Maintenance Procedures	SP000016
Standard Torques	SP000813
Upper Structure	
Cabin	SP000943
Counterweight	SP000940
Fuel Tank	SP001012
Fuel Transfer Pump	SP000021
Swing Bearing	SP001068
Swing Reduction Gear	SP001015
Lower Structure and Chassis	
Track Assembly	SP001016
Engine and Drive Train	
Drive Coupling (Main Pump)	SP001069
Hydraulics	
Hydraulic System Troubleshooting, Testing and Adjustment	SP001017
Accumulator	SP000028
Center Joint (Swivel)	SP000029
Cylinders	SP000030

Swing MotorSP001020	0
Travel Motor SP00102	1
Gear Pump SP00093	1
Main Control Valve SP000034	4
Axial Piston PumpSP001022	2
PTO ServerSP000933	3
Remote Control Valve (Work Lever / Joystick) SP000069	9
Travel Control Valve (with Damper) SP000070	0
Solenoid Valve Assembly SP000445	5
Breaker EPPR Valve (Opt)SP000192	2
Hydraulic Schematic (DX255LC)SP001023	3
Electrical System SP001025	5
Electrical Schematic (DX180LC/DX225LC/225NLC/255LC) SP000936	6
Attachments	
Boom and ArmSP001026	6
BucketSP000939	9