

[Click here to get the complete manual](#)

DX190W

Shop Manual

K1024513AE

Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety

Wheel Excavator Safety	SP000956
------------------------------	----------

Specifications

Specification for DX190W	SP001143
--------------------------------	----------

General Maintenance

General Maintenance Procedures	SP000016
Standard Torques	SP000813

Upper Structure

Cabin	SP001231
Counterweight.....	SP001145
Fuel Tank.....	SP001146
Fuel Transfer Pump	SP000021
Swing Bearing.....	SP001253
Swing Reduction Gear.....	SP001233

Lower Structure and Chassis

Ram Lock Valve.....	SP000923
Selector Valve.....	SP000926
Double Pilot Check Valve	SP000927
Solenoid Valve.....	SP000928
Front Axle	SP000929
Rear Axle	SP000930

Engine and Drive Train

Transmission	SP000962
Drive Coupling (Main Pump).....	SP000963

Hydraulics

Hydraulic System Troubleshooting, Testing and Adjustment	SP001149
Accumulator	SP000984
Center Joint (Swivel).....	SP000919
Cylinders.....	SP001098
Main Control Valve	SP000966
Swing Motor.....	SP000985
Travel Motor.....	SP001110
Counterbalance Valve	SP000991
Main Pump & PTO.....	SP000988
Gear Pump	SP000989
Service Brake Supply Valve	SP000990
Dozer Control Valve.....	SP000992
Steering Valve	SP000993
Accelerator Pedal Valve (Hydraulic)	SP000964
One Spool Valve.....	SP000996
Remote Control Valve (Work Lever / Joystick)	SP000069
Breaker EPPR Valve (Opt)	SP000192
Service Brake Pedal Valve	SP001006
Solenoid Valve Assembly	SP000997
Hydraulic Schematic	SP001160

Electrical System

Electrical System	SP000998
Electrical Schematic	SP001161

Attachments

Boom and Arm.....	SP001162
Bucket.....	SP001001