Click here to get the complete manual

DX60R

Shop Manual
K1042957E
Serial Number 50001 and Up

DOOSAN reserves the right to improve its products continuously, delivering the best possible product to the marketplace. These improvements can be implemented at any time with no obligation to change materials previously sold. It is recommended that consumers periodically contact their distributors for most recent documentation on purchased equipment.

This documentation may include attachments and optional equipment not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Table of Contents

Safety
Track Excavator SafetySP001614
Specifications
Specification for DX60RSP001615
General Maintenance
General Maintenance ProceduresSP000016
Standard TorquesSP000813
Upper Structure
Cabin
Swing BearingSP001624
Lower Structure and Chassis
Track AssemblySP001625
Engine and Drive Train
EngineSP001693
Drive Coupling (Main Pump)SP001627
Hydraulics
AccumulatorSP000028
Center Joint (Swivel)SP001628
CylindersSP001629
Swing MotorSP001630
Travel MotorSP001686
Main Control ValveSP001639
Main PumpSP001488

Remote Control Valve (Work Lever / Joystick)	SP001640
Dozer Valve	SP001490
Travel Contorl Valve	SP001641
Pedal Valve	SP001073
Hydraulic Schematic	SP001692
Electrical System	
Electrical System	SP001687
Electrical Schematic (DX60R/DX80R)	SP001688
Attachments	
Boom and Arm	SP001642
Bucket	SP001643