

[Click here to get the complete manual](#)

## **DX15 / DX18**

Shop Manual

K1043970AE

Serial Number 40001 and Up

*DOOSAN* reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

# Table of Contents

## Safety

Track Excavator Safety .....	SP001521
------------------------------	----------

## Specifications

Specification for DX15/DX18 .....	SP001522
-----------------------------------	----------

## General Maintenance

General Maintenance Procedures .....	SP000016
Standard Torques .....	SP000813

## Upper Structure

## Lower Structure and Chassis

Track Assembly .....	SP001523
----------------------	----------

## Engine and Drive Train

Engine.....	SP001524
-------------	----------

## Hydraulics

Center Joint (Swivel).....	SP001525
Cylinders.....	SP001526
Swing Motor.....	SP001527
Travel Motor (With Gear Box).....	SP001528
Pilot Control Valve (Work Lever / Joystick).....	SP001529
Main Pump.....	SP001530
Main Control Valve .....	SP001531
Solenoid Valve.....	SP001532
Hydraulic Schematic (DX15/DX18).....	SP001681

## **Electrical System**

Electrical System .....	SP001534
Electrical Schematic (DX15/DX18) .....	SP001535

## **Attachments**

Boom and Arm.....	SP001536
Bucket.....	SP001550