## Click here to get the complete manual

**DL450** 

Shop Manual
K1039661E
Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Serial Number 5001 and Up

Pub.No. K1039661E



**Product Label** 

**Instructions** 

**Trim Out The Label Along The Lines And Insert Into Pocket On The Binder Spine** 

## **Table of Contents**

Safety	
Wheel Loader Safety SI	P001667
Specifications	
Specification for DL450SI	P001668
General Maintenance	
General Maintenance ProceduresSI	P000097
Standard TorquesSI	P000813
Engine	
QSM11 Engine SI	P001669
Drive Train	
Transmission and Torque Converter (ZF 4WG-260-4)SI	P001670
Transmission Error Codes (ZF)	P000100
Axle (ZF-MT-L 3105)	P001672
Drive ShaftSI	P001673
Brake	
Service Brake SI	P001674
Brake Supply ValveSI	P000121
Parking Brake SI	P000122
Brake Pedal ValveSI	P000123
AccumulatorSI	P001675
Steering	
Steering UnitSI	P001676
Flow Amplifier SI	P000126
Cushion ValveSI	P000127

Emergency Steering
Frame
Articulation Center
CounterweightSP000130
Tank
Oil Tank
Fuel TankSP001680
Hydraulics
Main Control Valve
Load Isolation System SP001682
Cooling SystemSP000154
Pilot SystemSP001714
Hydraulic Schematic (DL450)
Electrical System
Air Conditioner
Electrical System
Electrical Schematic (DL450)