Click here to get the complete manual

DL500

Shop Manual
K1010637E
Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

Pub.No. K1010637E

Serial Number 5001 and Up

Product Label

Instructions

Trim Out The Label Along The Lines And Insert Into Pocket On The Binder Spine

Table of Contents

Safety	
Wheel Loader Safety	. SP000814
Specifications	
Specification for DL500	. SP000801
General Maintenance	
General Maintenance Procedures	. SP000097
Standard Torques	. SP000813
Engine	
QSM11 Engine	. SP000755
Drive Train	
Transmission and Torque Converter (ZF 4WG-310)	. SP000786
Transmission Error Codes (ZF)	. SP000100
AXLE (ZF - AP - 420R)	. SP000788
Drive Shaft	. SP000789
Brake	
Service Brake	. SP000790
Brake Supply Valve	. SP000121
Parking Brake	. SP000122
Brake Pedal Valve	. SP000796
Accumulator	. SP000791
Steering	
Steering Unit	. SP000792
Flow Amplifier	. SP000126

Cushion Valve	SP000127
Emergency Steering	SP000793
_	
Frame	
Articulation Center	SP000802
Counterweight	SP000130
Tank	
Oil Tank	SP000794
Fuel Tank	SP000797
Hydraulics	
Main Control Valve	SP000809
Load Isolation System	SP000800
Cooling System	SP000795
Pilot System	SP000799
Hydraulic Schematic (DL500)	SP000804
Electrical System	
Air Conditioner	SP000172
Electrical System	SP000803
Electrical Schematic (DL500)	SP000806