## Click here to get the complete manual

## DX180LC

Shop Manual
K1024431E
Serial Number 5001 and Up

DOOSAN reserves the right to improve our products in a continuing process to provide the best possible product to the market place. These improvements can be implemented at any time with no obligation to change materials on previously sold products. It is recommended that consumers periodically contact their distributors for recent documentation on purchased equipment.

This documentation may include attachments and optional equipment that is not available in your machine's package. Please call your distributor for additional items that you may require.

Illustrations used throughout this manual are used only as a representation of the actual piece of equipment, and may vary from the actual item.

## **Table of Contents**

Safety
Track Excavator SafetySP000014
Specifications
Specification for DX180LCSP001028
General Maintenance
General Maintenance Procedures
Standard Torques
Upper Structure
Cabin
CounterweightSP000940
Fuel Tank
Fuel Transfer Pump
Swing BearingSP000022
Swing Reduction GearSP000915
Lower Structure and Chassis
Track Assembly
Engine and Drive Train
Drive Coupling (Main Pump)SP001033
Hydraulics
Hydraulic System Troubleshooting, Testing and Adjustment SP001034
AccumulatorSP000028
Center Joint (Swivel)
CylindersSP000030

Swing MotorSP000194
Travel MotorSP001036
Main PumpSP001030
Main Control ValveSP001029
PTO ServerSP000933
Remote Control Valve (Work Lever / Joystick)SP000069
Travel Control Valve (with Damper) SP000070
Solenoid Valve AssemblySP000445
Breaker EPPR Valve (Opt)SP000192
Hydraulic Schematic (DX180LC)SP001037
Electrical System
Electrical SystemSP001038
Electrical Schematic (DX180LC)SP000936
Attachments
Boom and ArmSP001039
BucketSP000939