

570LXT Loader/Loader Landscaper Service Manual

Table of Contents

Description	Section No.	Form No.
General	Tab 1	
Section Index - General		7-50780
Standard Torque Specifications	1001	8-71601
Fluids and Lubricants	1002	7-49781
Loctite Product Chart		8-98900
Engines	Tab 2	
Section Index - Engines		7-50790
Engine and Radiator Removal and Installation	2000	7-49650
Stall Tests	2002	7-49790
Specification Details	2402	8-24164
Aftercooler	2411	7-43511
Cylinder Head and Valve Train	2415	8-24174
Cylinder Block	2425	8-24184
Lubrication System	2445	8-24194
Cooling System	2455	8-24204
Turbocharger	2465	8-25551
Turbocharger Failure Analysis	2565	9-78235
Fuel System	Tab 3	
Section Index - Fuel System		7-50800
Fuel System and Filters	3410	8-24212
Fuel Injectors	3413	8-24234
CAV Fuel Injection Pump	3414	7-37132
Electrical	Tab 4	
Section Index - Electrical		7-50810
Removal and Installation of Electrical Components	4000	7-49430
Electrical Specifications and Troubleshooting	4001	7-49801
Batteries	4003	8-49440
Starter and Starter Solenoid	4004	7-48740
Instrument Cluster	4005	7-49560
Alternator	4007	7-49250

Reprinted

570LXT Loader/Loader Landscaper Service Manual

Table of Contents

Description	Section No.	Form No.
Steering	Tab 5	
Section Index - Steering		7-50821
Removal and Installation of Steering Components	5000	7-49450
Steering Specifications, Pressure Checks and Troubleshooting	5001	7-49810
Steering Control Valve	5002	7-49461
Steering Cylinders	5003	7-49470
Front Axle - Two Wheel Drive	5005	7-48770
Front Axle - Four Wheel Drive	5006	7-51150
Power Train	Tab 6	
Section Index - Power Train		7-50832
Removal and Installation of Power Train Components	6000	7-49580
Transmission Specifications, Pressure Checks and Troubleshooting	6002	7-49820
Wheels and Tires	6003	7-50840
Rear Axle and Planetaries	6004	7-51070
Transmission	6007	7-48790
Brakes	Tab 7	
Section Index - Brakes		7-50851
Removal and Installation of Brake Components	7000	7-49600
Master Cylinder	7003	7-49490
Hydraulics	Tab 8	
Section Index - Hydraulics		7-50863
Removal and Installation of Hydraulic Components	8001	7-50870
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002	7-49761
Cleaning the Hydraulic System	8003	7-49640
Hydraulic Pump	8004	7-50910
Loader Control Valve	8005	7-49191
Cylinders	8006	7-50880
Three Point Hitch Control Valve	8007	7-50890
Auxiliary Control Valve	8008	7-51670
Accumulator for Optional Ride Control	8009	7-52450
Solenoid Valve for Optional Ride Control	8010	7-52460

SECTION INDEX - GENERAL

Section Title	Section Number
Standard Torque Specifications	1001
Fluids and Lubricants	1002
Loctite Product Chart	