



Service Manual

500 Series

From m/c No. 561001

PUBLISHED BY THE TECHNICAL PUBLICATIONS DEPARTMENT OF
JCB SERVICE; © ROCESTER, STAFFORDSHIRE, ST14 5LS, ENGLAND
Tel. ROCESTER (01889) 590312 PRINTED IN ENGLAND

Publication No. 9803/3600

Contents

This Service Manual covers the following Machines:-

525-58 and 525-58 Farm Special - from machine Serial Number 561001

525-67 and 525-67 Farm Special - from machine Serial Number 561001

525-58 and 525-67 Farm Special Plus

525-58 and 525-67 Basic Servo Options

527-58 and 527-67 - from machine Serial Number 572775

530-95 - from machine Serial Number 564980

530-110 - from machine Serial Number 563359

530-110 and 530-120 - PlaceAce

530-110 and 530-120 Servo Options

530-120 - from machine Serial Number 562601

530-67 and 530-67 Farm Special - from machine Serial Number 571001

535-67 - from machine Serial Number 572775

* 537-120 and 537-130 from machine Serial Number 572900

Information covers two stage and three stage boom machines.

General	1
Hydraulics	2
Body and Framework	3
PlaceAce Control System	4
Servo Control System	4A
Engine	5
Transmission	6
Axles	7
Brakes	8
Hydraulic Steering	9
Electrics	10
Service Tools	11
Index	
